 




LOCK REPLACEMENT

These instructions will guide you through replacing your Keyed Lock system or installing a Combination Lock system on your Original Hangman™ Triple Secure™ storage system. Simply follow the instructions below.

While it is possible to replace / install a lock while the Original Hangman™ Triple Secure™ storage system is hanging from the closet rod, it is better to carefully unload any items you have stored in the storage system, remove the Original Hangman™ Triple Secure™ storage system from the closet rod and lay it on a flat surface.

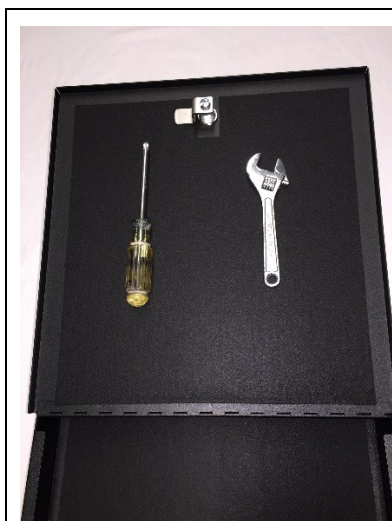 


You will need a Phillips (PH) screw driver for the cam SCREW and WASHER, and a wrench for the 7/8 in. LOCK retaining NUT.



While supporting the DOOR, use the screwdriver to loosen (turn to the left) the SCREW holding the CAM to the LOCK.

Set the CAM, SCREW and WASHER to the side.

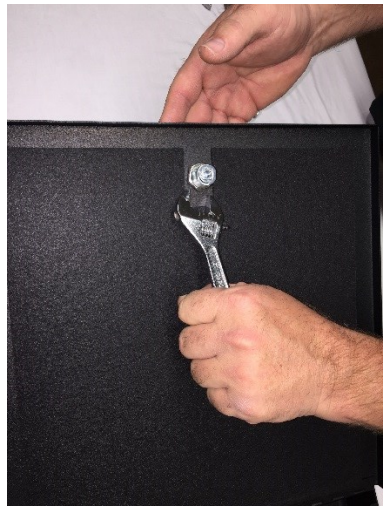

While supporting the DOOR, use the wrench to loosen (turn to the left) the lock retaining NUT. Remove the NUT.

Remove the LOCK from the DOOR.

Installation of the replacement lock or the Combination Lock (optional accessory) uses the same steps above, as described below.

 
1. Remove the CAM from the replacement LOCK by unscrewing the cam SCREW. Set these aside as you will reuse them.
2. Unscrew the lock retaining NUT from the LOCK and set it aside.
3. Insert the LOCK into the lock hole in the DOOR, paying attention to the orientation of the KEY (Up or Down).
4. Thread the retaining NUT onto the LOCK by hand. If you can't do it by hand, you may have cross-threaded the NUT onto the LOCK—remove and try again. Tighten the NUT with a 7/8 in. wrench.
5. Using the KEY as your guide, orient the CAM on the end of the LOCK, and lightly tighten the cam SCREW and WASHER.

6. Test the CAM orientation by rotating the KEY. If correct, tighten the cam SCREW and WASHER with a screwdriver.

You're done!


How to operate your lock?

■ The factory preset combination is 0-0-0, even though the dials may appear in other numbers.

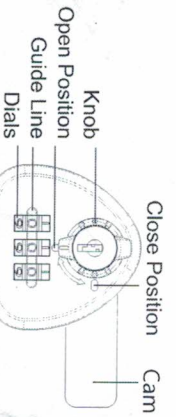


TO OPEN:

 Turn the Dials and align the opening combination numbers with the Guide Line. Turn the Knob to the Open Position.

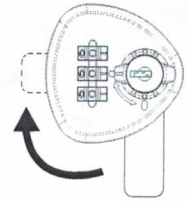

TO LOCK:

 Turn the Knob to the Close Position and scramble the combination to lock it.

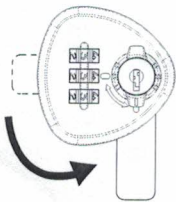

How to reset your combination?

■ The factory preset combination is 0-0-0, even though the dials may appear in other numbers.

1. Leave the Dials at preset combination 0-0-0. (Fig. A)

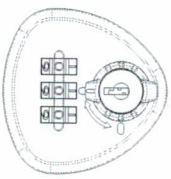 


Fig. A

2. Push the Reset Button with a pin (or other similar tools) all the way (Fig. B) until complete turning the Dials to your desired combination. (Fig. C) Do NOT let go of the Reset Button while setting the combination.



Fig. B



Fig. C

3. Release the Reset Button after changing to your own combination. Your lock is now ready to open at its new combination. (Fig. D)



Fig. D

How to retrieve the forgot combination?

1. Insert the Master Key when the Knob is in Close Position. (Fig. E)
2. Turn the Master Key clockwise 90°. (Fig. F)
3. Gently rotate each Dial from left to right until it stops. (Fig. G)
4. Turn the Master Key counterclockwise 90° and remove the key. (Fig. H) You can now keep using the retrieved combinations or reset your new desired numbers.



Fig. E

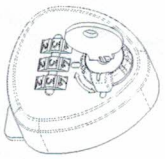 


Fig. F

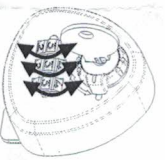 


Fig. G

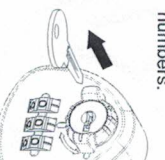 


Fig. H

■ The Master Key operation may be used at any time to open a lock in an emergency.
 ■ Always keep your secret combination in a safe and accessible place for future reference.

** Notice of Installation **

■ If you assemble the Cam by yourself, please make sure to put the Cam against an obstacle during installation.

1. Make sure the Knob remains in the Close Position. (Fig. I)
2. Put the Cam against an obstacle and screw the Cam to the lock clockwise (Fig. J)

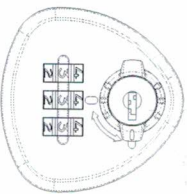 


Fig. I

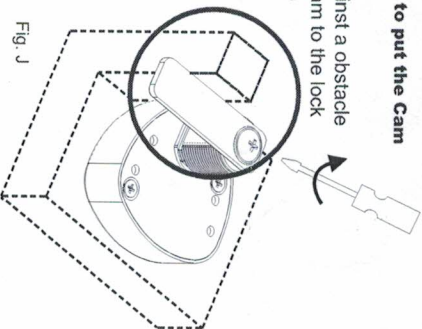 


Fig. J