



You are now the proud owner of the Original Hangman™ Triple Secure™ XXL storage system. Please read these assembly instructions carefully.

ASSEMBLY

To minimize shipping costs, your storage system is sent to you with some assembly required. You will need to install the Hanger and Hook to complete your storage system. If you also purchased a QuickBag, you will need to combined those installation instructions with these assembly instructions. The process is simple and requires no tools (although pliers may make installing the cotter pins easier). Simply follow the instructions below.



Everything you need to assemble your Original Hangman™ Triple Secure™ storage system for hanging in your closet is shown in this photo. The parts are 1-locking UNIT, 1-HANGER, 1-HOOK with CABLE LOCK, 2-WASHERs, and 2-COTTER PINs.

Take a moment to look where you will hang the Original Hangman™ Triple Secure™ storage system to decide if the HOOK should open to the right or left. (It is simple to change the direction of the HOOK whenever you want to.)



Once you have decided in which direction the HOOK should open, install the HOOK on the HANGER by sliding one end of the HANGER through the HOOK eyelet, as shown in the photo.

Note that in this photo, the HOOK opens to the left, so access to the Original Hangman™ Triple Secure™ storage system will be from the left side as it hangs in the closet.



Unlock and open the DOOR, and insert one end of the HANGER into one of the holes in the UNIT (holes on the sides near the top). You can leave the other HANGER end out for now. Place one of the WASHERS on the HANGER end that is inside of the UNIT, then insert the straight leg of the COTTER PIN through the hole in the HANGER end. Pliers may make installation of the COTTER PIN easier.

This photo shows the WASHER and COTTER PIN in the correct position.



If you haven't installed the HOOK on the HANGER, you need to do so now!

Pull the HANGER in the direction of the remaining side hole and insert the other HANGER end through this hole. Repeat the steps above to install the WASHER and COTTER PIN on this HANGER end.

Assembly is now complete!

INSTALLATION

Once you have assembled the Original Hangman™ Triple Secure™ storage system as described above, you are ready to install the storage system in your closet. Just hang the storage system from the closet rod (or metal closet system) so that the CABLE LOCK is on the backside (wall side) of the closet, as shown below. We recommend placing items in the Original Hangman™ Triple Secure™ storage system once the storage system has been hung and the cable lock installed.

Take the free end of the CABLE LOCK and feed it through the hole in the top surface of the UNIT. Use the WING NUT to secure the CABLE LOCK to the UNIT. See picture below.

Although the photo below shows two long guns in the UNIT, please install the CABLE LOCK *before* storing any firearms.

MAKE SURE ANY FIREARM IS UNLOADED BEFORE STORING IN Original Hangman™ Triple Secure™ storage system.



Once the Original Hangman™ Triple Secure™ storage system is installed in your closet, you can store whatever items to want to keep secure. Once you lock the DOOR, your valuables are doubly secure. To realize the Triple Secure™ security feature, you need to camouflage the storage system by hanging an article of clothing from the HANGER. You can choose whether the clothing opens to the DOOR or the backside of the Original Hangman™ Triple Secure™ storage system. There is an Original Hangman™ Triple Secure™ storage system and an Original Hangman™ XXL Triple Secure™ storage system in the picture below.



NOTES:

- Please be aware of how much the Original Hangman™ XXL Triple Secure™ storage system and its contents weigh. You don't want to overload the closet rod or pull the rod brackets or closet system from the wall. The strongest points are usually on either side of a support bracket and where the rod is supported by the wall. You can install (or you can ask your management company to install, if you are a renter) additional closet rod support brackets. Hangman Systems, LLC is not responsible for damage to closets, structures or personal items caused by overloading the item from which the Original Hangman™ Triple Secure™ storage system is suspended.
- Use the hook & loop fasteners to secure the gun barrels to the UNIT. Failure to use the use the hook & loop fasteners may allow the guns to fall out of the storage system when the door is opened. **MAKE SURE ANY FIREARM IS UNLOADED BEFORE STORING IN Original Hangman™ XXL Triple Secure™ storage system.**
- Most closet rods are easily removed from the rod end support brackets (once the clothes are removed). To make removal of the closet rod (and therefore removal of the Original Hangman™ Triple Secure™ storage system from the closet rod), you may consider securing the closet rod to its end mounts or support brackets. For example, you may be able to insert a screw or nail into the wall (preferably into a wall stud) above the end of the closet rod to make removal of the rod more difficult. **HOWEVER**, you are responsible for any damage you may cause to the closet or other structures. This especially important if you are a renter. Proceed with caution.

- If you purchased any Accessories, instructions for those Accessories are provided separately.